

# Network Safeworking Rules and Procedures

## Indicators

Rule Number: 6009

---

Arc Infrastructure maintains the master for this document and publishes the current version on the Arc Infrastructure website. All changes and updates to the Network Safeworking Rules and Procedures are authorised by the Arc Infrastructure Rule Book Committee. This document is uncontrolled when printed.

---

#### Document History

Version	Effective Date	Pages updated	Reasons for change
2.01	21 11 2022	5, 6	Glossary term and white light added to figure

## Table of Contents

1.	Purpose.....	3
2.	General .....	3
2.1	Driver's Proceed Indicators.....	3
3.	Junction Indicators .....	4
4.	Electrically Illuminated Points Indicator .....	5
4.1	White Light Type .....	5
4.2	Coloured Light Type .....	6
5.	Mechanical Points Indicator .....	6
5.1	Round Type Points Indicator .....	6
5.2	Square Type Points Indicator .....	7
5.3	Catch Points Indicator .....	7
5.4	Cheese Knob Points.....	7
6.	Driver's Proceed Indicators (DPI).....	8
7.	Passing Indicators at Unattended Train Order Crossing Stations .....	9
8.	Passing Defective Indicators.....	9
9.	References.....	9
10.	Effective Date.....	9

# 1. Purpose

The function of this rule is to describe the protocols for using indicators. They are provided to give *Rail Traffic Crew* information on the *Route* setting of *Points* and may be used in conjunction with *Fixed Signals*.

## 2. General



**WARNING: Indicators do not indicate the line ahead is *Clear*.**

**When used in conjunction with signals, the Indicator when illuminated does not authorise the *Rail Traffic Crew* to pass a signal at Stop. The signal must show PROCEED for *Authority* to pass.**

Where a *Fixed Signal* is not provided to govern the movement, *Rail Traffic Crews* must not proceed through the *Points* until verbally or *Handsignalled* to do so.

Indicators work in conjunction with the *Points* to which they apply, solely to indicate the way the *Points* are set.

*Points Indicators* take several forms:

- Junction indicators;
- electrically illuminated *Points Indicators*; and
- mechanical *Points Indicators*.

The different forms of indicators may be used in combination with each other.

### 2.1 Driver's Proceed Indicators

Driver's Proceed Indicators (DPI) are provided on the approach to some *Active Controlled Level Crossings* to indicate to *Rail Traffic Crews* that the *Level Crossing Protection* is active.

### 3. Junction Indicators


A Junction Indicator is mounted above the *Controlled Absolute Signal* with which it is associated and exhibits an indicator for each diverging *Route* in conjunction with a PROCEED indication on the signal.

A Junction Indicator may be provided with up to six arms fixed at 45 degree intervals. Diverging routes only are indicated. No indication is provided for the non-diverging line.

Each arm of the Junction Indicator contains five white lights. A minimum of three white lights must be illuminated before a PROCEED Indication can be displayed on the signal.

A Junction Indicator, when illuminated, does not *Authorise Rail Traffic Crew* to pass a signal at STOP. The signal must show a PROCEED indication for *Authority* to pass it.

Signals with Junction Indicators attached can only be passed at STOP in accordance with Rule 6013 Passing Fixed Signals at STOP.

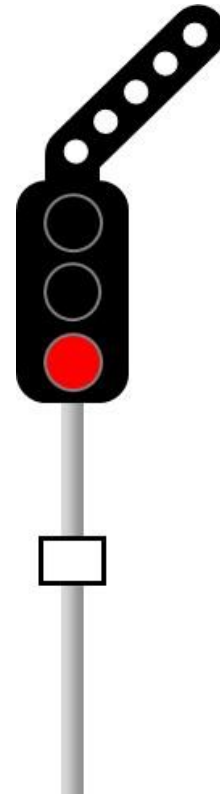

## 4. Electrically Illuminated Points Indicator

An Electrically Illuminated *Points* Indicator is located *Adjacent* to and works in conjunction with, the electric *Point* motor attached to *Self-Restoring Points*.

The operations of *Self-Restoring Points* are detailed in Procedure 9022 Operation of Self Restoring Points.

The indicator:-

- consists of two triangular shaped indicators mounted one above the other on a single mast:
  - the upper indicator applies to *Rail Traffic* approaching in the *Facing* direction; and
  - the lower indicator applies to *Rail Traffic* approaching in the *Trailing* direction.
- has a matte black finish on both sides with a strip of white reflectorised tape surrounding the outline of the indicator and contains three lights as an indication to approaching *Rail Traffic*.

### 4.1 White Light Type

Only two white lights will be visible at any one time on each indicator and, for an approaching *Rail Traffic Crew*, will indicate that:

- when there are two lights in a vertical position, that the *Points* are set and locked for the normal setting.
- when there are two lights at a 45°, the *Points* are set and locked for the reverse setting.
- if only one light or no lights are visible, *Rail Traffic* must not pass over the *Points* until they have been examined by the *Rail Traffic Crew*. The *Rail Traffic Crew* in this instance must ensure the *Points* are correctly set for the safe passage of the *Rail Traffic*.

The indicator lights may be lit when a *Train* is within approximately 400 metres of the *Station*.



## 4.2 Coloured Light Type

Only one light will be visible at any one time on each indicator and, for an approaching *Rail Traffic Crew*, will indicate:


- when there is a white light, that the *Points* are set and locked for the normal setting.
- when there is a yellow light, that the *Points* are set and locked for the reverse setting.
- when there is a red light, that the *Points* are out of correspondence and not set, *Rail Traffic* must not pass over the *Points* until they have been examined by the *Rail Traffic Crew*. The *Rail Traffic Crew* in this instance must ensure the *Points* are correctly set for the safe passage of the *Rail Traffic*.



# 5. Mechanical Points Indicator

## 5.1 Round Type Points Indicator

Round type *Point* Indicators, attached to *Main Line Points* in *Train Order Territory*, have a round reflectorised green target when set in the normal *Main Line* position and a round reflectorised red target when set in the reverse position.

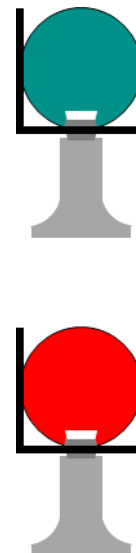


## 5.2 Square Type Points Indicator

Square type *Point* Indicators have a square half red and half green reflectorised target.

The green is exhibited in the direction for which the *Points* are set.


These indicators are usually found in *Station* yards and at Junctions.

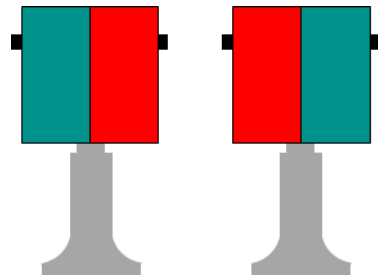

## 5.3 Catch Points Indicator

*Catch Point* Indicators have a square red reflectorised target when in the normal derail position and a square green reflectorised target when reversed to the running position.

These indicators are found in *Station* yards attached to *Catch Points*.

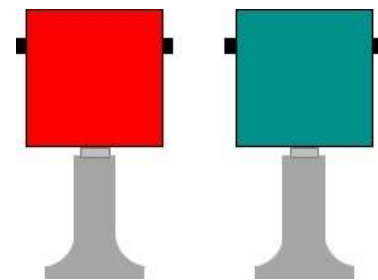

## 5.4 Cheese Knob Points

Cheese knob *Points* are painted:

- white on one side to indicate *Points* are set to the right; and
- black on the other side to indicate the *Points* are set to the left.



## 6. Driver's Proceed Indicators (DPI)

Operations of DPIs are included in the Local Instructions for the *Location* concerned. Local Instructions are detailed in *Arc Infrastructure's*:

- Rail Access Management System (RAMS);
- Intranet site "The Depot"; and
- Internet site [www.arcinfra.com](http://www.arcinfra.com).

DPIs use white, yellow and red lights to indicate the status of *Active Control Level Crossing Protection* equipment.





## 7. Passing Indicators at Unattended Train Order Crossing Stations

*Rail Traffic Crews* must not proceed through the *Points* until verbally or *Hand signalled* to do so.

If no *Crossing*, passing or Shunting is to take place, the *Rail Traffic* shall enter the *Station* on the Main Line, or as directed on the *Train Order*, and a verbal or *Hand signal* is not required.

Where the *Rail Traffic* is not required to stop for the *Issue* of a further *Train Order* or for any other reason, the *Rail Traffic Crew* shall proceed at *Authorised Speed*.

## 8. Passing Defective Indicators

*Rail Traffic Crews* must not pass mechanical or Electrically Illuminated *Points* Indicators that display no indication or display an *Illegal Indication* until:

- the *Points* have been checked and set for the *Route*; and
- if necessary, the *Points* have been *Secured*.

If the DPIs are not working correctly, *Rail Traffic Crews* must act in accordance with Rule 2015 Active Control Level Crossing Management.

## 9. References

2015 Active Control Level Crossing Management.

6013 Passing Fixed Signals at STOP.

9022 Operation of Self Restoring Points.

## 10. Effective Date

21 November 2022